

KENDALL + KYLIE

Headphone User Guide

CHARGING

- On the right earcup, carefully plug the USB-C cable into the USB-C charging port and connect the other end of the cable to either a computer USB port or to a UL certified USB wall charger.
- Solid red LED light will appear to indicate when the headphone is charging.
- When charging is complete, the LED light will turn Blue.
- Charging time is approximately 1.5 hours.

TURN IT ON / OFF

- Press & hold the power button on the right side of the headphone for about 3 seconds until the LED indicator light turns on.
- Press & hold the power button again for 3 seconds until the LED light turns off.

PAIR & CONNECT WITH A NEW DEVICE

- Power on the wireless bluetooth headphone (refer to the "Turn It On" section).
- To pair the headphone with a new device, ensure the device is not connected to any other device. The red & blue LED light will blink to indicate it is ready to be paired with a new device.
- On your Bluetooth-enabled smartphone, tablet or media player, navigate to the Bluetooth settings menu, turn on Bluetooth and search for new devices. After a few seconds you will see "K+K KWEEN" listed.
- Tap this model to select it. A solid blue LED light indicates your device has successfully paired.
- With your previously paired device's Bluetooth turned on and in range, the headphone will automatically reconnect to the last Bluetooth device it was connected to.

NOTE: If the headphone is not used within 5 minutes, the headphones will automatically turn off to save battery.

PLAY

- Connect your device to the headphone via Bluetooth (refer to the "Pair & Connect" section)
- Open your favorite music app and press play.
- Control the music, track & volume from your device or from the controls on the headphones. Press the Power button once to play/pause music & answer calls. Press it twice to redial the last number called on your phone and press & hold it to reject an incoming call.
- All audio, including music, games, videos and notifications will be routed through the headphone.

BUTTON FUNCTION

- Press **+** area (refer to product Diagram) to turn up the volume.
- Press **-** area (refer to product Diagram) to turn down the volume.
- Press and hold **+** area (refer to product Diagram) to skip to the next track.
- Press and hold **-** area (refer to product Diagram) to return to the previous track.
- Press **Q** area (refer to product Diagram) to use your connected devices Voice Assistant.

TROUBLESHOOTING

No power


Recharge your wireless bluetooth headphone using the USBC cable.

Music is not playing over Bluetooth

Make sure your Bluetooth device has A2DP profile. Check if both devices are paired and connected over Bluetooth. Restart the headphone to reconnect your Bluetooth device.

Bluetooth device will not reconnect with the headphone

Navigate to your Bluetooth settings menu on your Bluetooth device, tap "K+K KWEEN", and select "Forget". Now follow the steps to pair your device again. Or, press & hold the power button on the headphone (while powered on) to disconnect the headphones from any connected devices. Then follow the steps to reconnect your device.

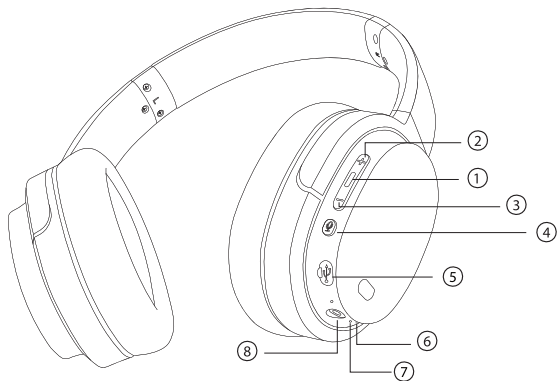

- ① Press & Hold (3 Sec): Power On
Press & Hold (3 Sec): Power Off
Press Once: Play/Pause, Answer/End Calls
Double Click: Re-dial Last Dialed Phone Number
Press & Hold (1-2 Sec): Reject Incoming Call

- ⑤ USB-C Charging Port
- ⑥ Microphone
- ⑦ LED indicator
- ⑧ 3.5mm jack

- ② Next Track / Volume Up
- ③ Previous Track / Volume Down
- ④ Voice Assistant

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

RF Warning Statement: The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

FCC ID: 2ARUI-KKWEEN

WARRANTY: This limited warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

For all warranty information please visit:
itouchwearables.com/pages/warranty-policy

DO NOT RETURN PRODUCT TO THE
STORE FOR SERVICING



FOR TECHNICAL ASSISTANCE, WARRANTY AND
CUSTOMER SERVICE, CALL:
 +1 (888) 200-6081

PLEASE VISIT US AT:
www.itouchwearables.com